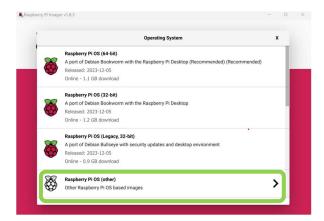
## **IMPORTANT - PLEASE READ**

Raspberry Pi's newest OS (Bookworm) released on December 5, 2023, does not work well with this installation.

For best results, use a Raspberry Pi 4 (not a Raspberry Pi 5) and use the legacy 64-bit OS. To load the legacy OS, use Raspberry Pi Imager and select Raspberry Pi 4 as the Raspberry Pi Device. After you select CHOOSE OS under Operating System, select Raspberry Pi OS (other) [Figure 1]. On the next screen, scroll down and select Raspberry Pi OS (Legacy, 64-bit) [Figure 2], and proceed as normal from there.



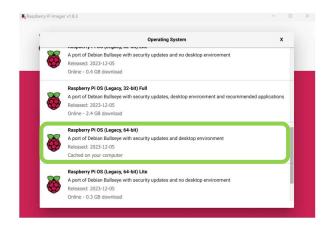


Figure 1 Figure 2